

AMPMK Certificate Patch 2022

Issue

AMPMK Certificate Patch 2022 is designed to meet the customers need to install the ANCA Group certificate, without the requirement to re-image the SSD.

The small-sized patch will update to the latest 2022 certificate. This is purely just a certificates update and can be installed on any PMK9 and PNK10 versions.

Product

Product	Download Link
AMPMK-CertificatePatch2022.zip	https://motion.anca.com/Anca.Motion/media/Software-Downloads/AMPMK-CertificatePatch2022.zip

Applications

Product	Part Number	Correct Image Version
PMK V9.01	963-0-01-0049	SW646-0-01-5000
PMK V9.02	963-0-02-0049	9.2.39239
PMK V9.03	963-0-03-0049	9.3.46557
PMK V9.03.1	963-1-03-0049	9.3.46557
PMK V9.03.2	963-2-03-0049	9.3.46557
PMK V9.04	963-0-04-0049	9.4.67198
AM PMK 10.0 – AMC5 G2 CNC	963-0-00-0053	10.0.77665
AM PMK 10.0 – AMC5 G2 CNC	963-1-00-0053	10.0.86359
AM PMK 10.1 – AMC6 CNC	963-0-01-0054	10.1.81509
AM PMK 10.1 – AMC6 CNC	963-0-01-0054	10.1.86935
AM PMK 10.1 – IPC	963-0-01-0054	10.1. 81855
AM PMK 10.1 – IPC	963-1-01-0054	10.1.86442
Note: Please refer to Image Version Checking section for more details.		

Actions

- AMPMK Certificate Patch 2022 is a convenient option to add the certificate without changing the PMK version or re-imaging the SSD on machine.

Appendix

Image Version Checking

1. Open a command prompt
Open Windows Explorer and type the following “C:\Windows\System32\cmd.exe”.

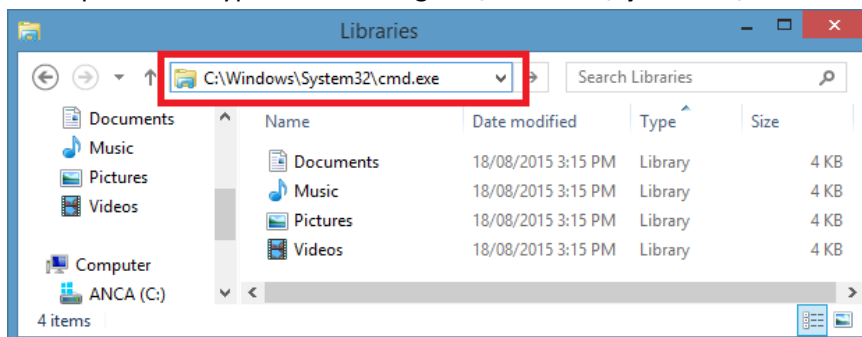


Figure 1 – Command Prompt

2. At the command line type
“reg query HKLM\SOFTWARE\ANCAMotion /v EmbeddedImageVersion”

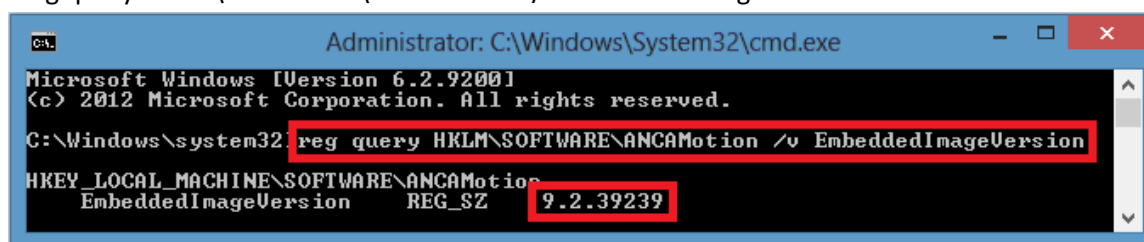


Figure 2 - Image Version Registry

Setup to Install AMPMK Certificate Patch 2022

1. First, right click the AMPMK-CertificatePatch2022.zip, select “7-Zip”, and then select “Extract Here”, as shown in Figure 3.

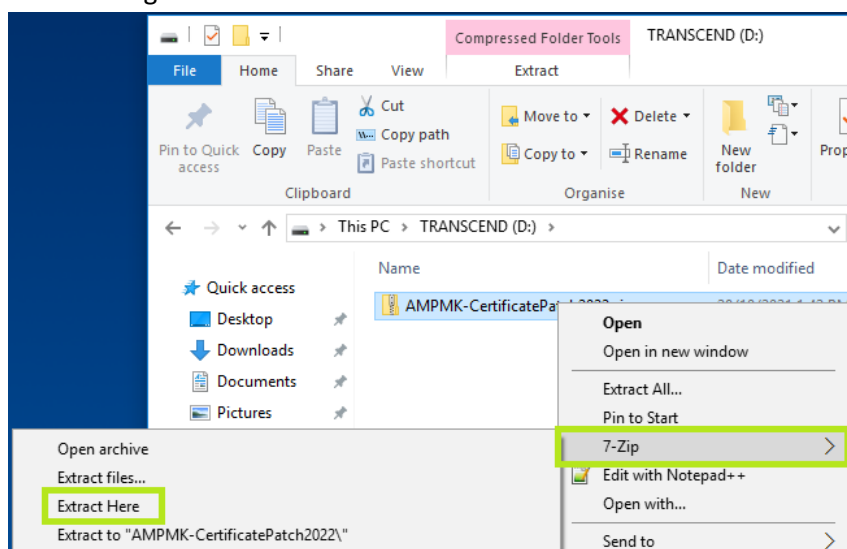


Figure 3 - Extract file

2. Extract “AMPMK-CertificatePatch2022.zip” to target CNC or storage device, as shown in Figure 4.

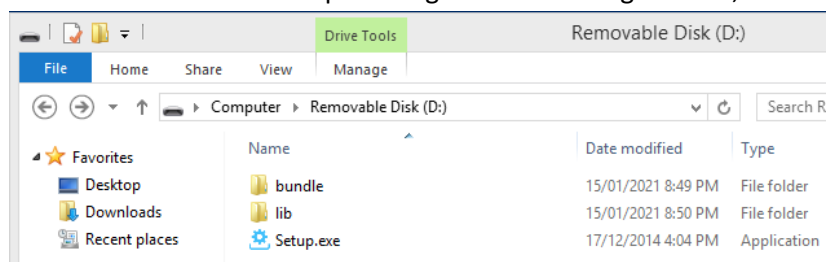


Figure 4 - Installation Files

3. Double click “Setup.exe” as shown in Figure 5. A “Setup Wizard” will be shown as in Figure 6.

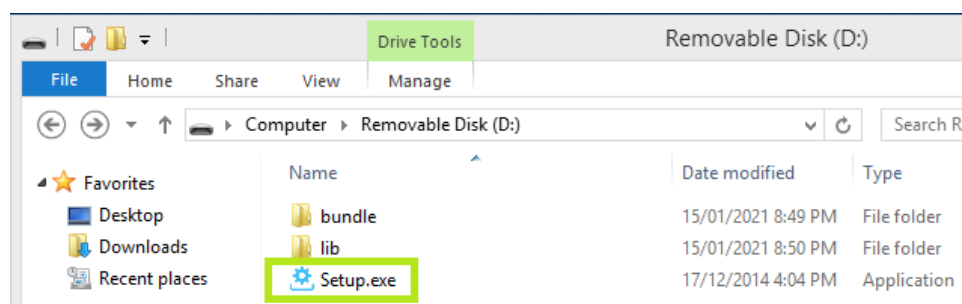


Figure 5 - Setup



Figure 6 - Setup Wizard

4. Once a “Dialog Box” is displayed as shown in Figure 7, click “Install” button to start. After the installation process is finished another “Dialog Box” is displayed as shown in Figure 8. Please click “Close” button to complete installation.

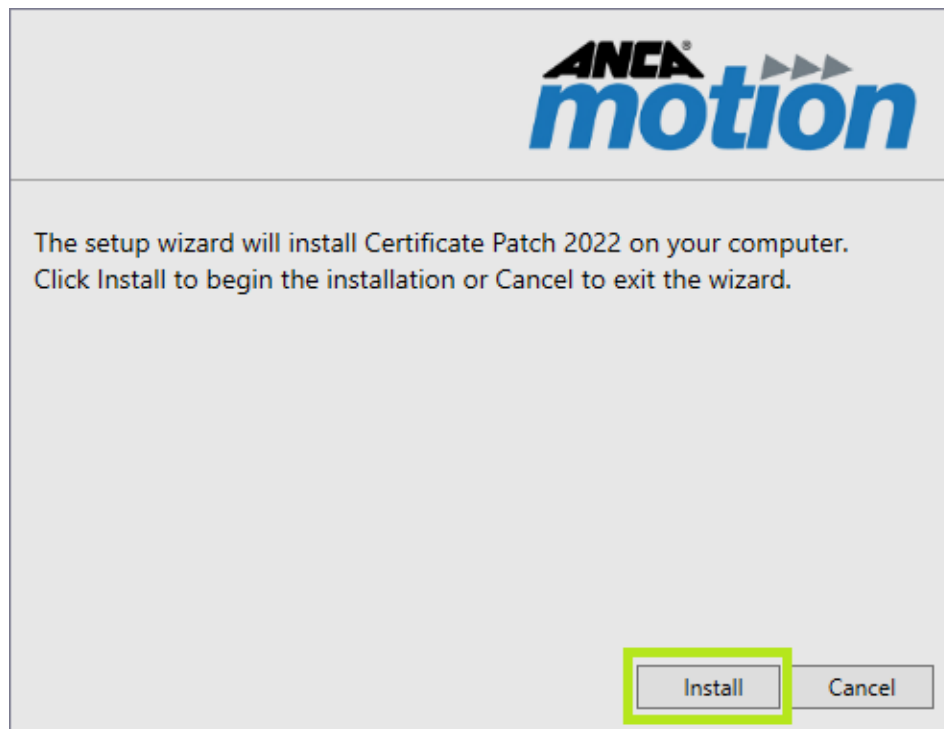


Figure 7 – Installation

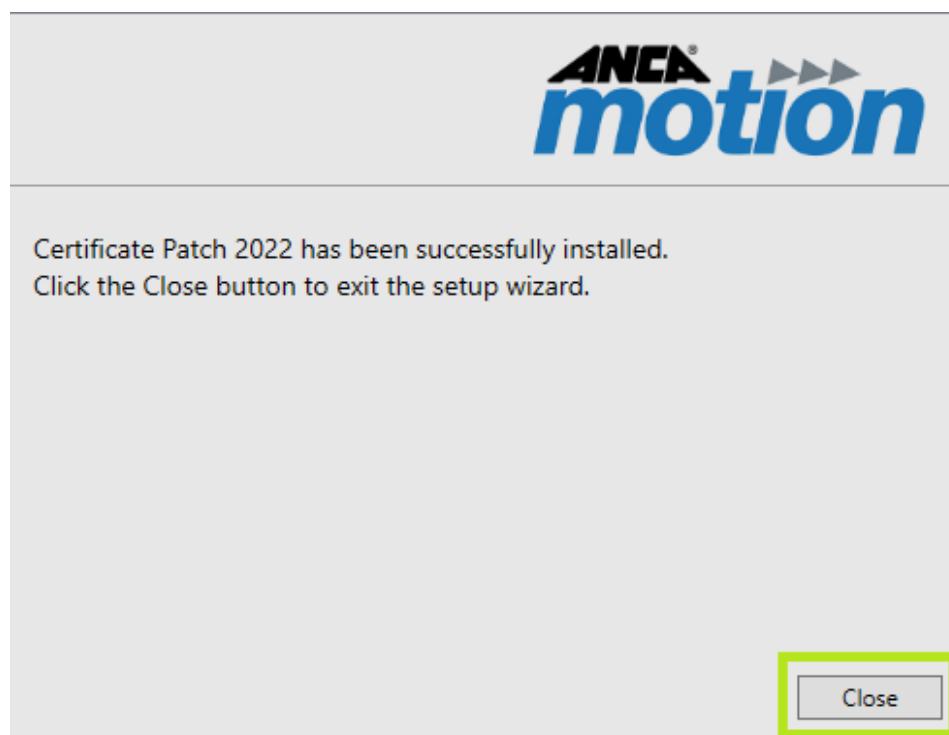


Figure 8 - Installation finish



Product, Sales, and Service Enquiries

If you require additional assistance for installation, training, or other customer support issues, please contact the closest ANCA Motion Customer Service Office in your area for additional details.

ANCA Motion Pty. Ltd.

1 Bessemer Road
Bayswater North
VIC 3153
AUSTRALIA
Telephone: +61 3 9751 8900
Fax: +61 3 9751 8901
www.ancamotion.com/Contact-Us
Email: sales.au@ancamotion.com

ANCA Motion Taiwan

4F., No.63, Jingke Central Rd., Nantun Dist.,
Taichung City 40852,
TAIWAN
Telephone: +886 4 2359 0082
Fax: +886 4 2359 0067
www.ancamotion.com/Contact-Us
Email: sales.tw@ancamotion.com

ANCA Motion China

No. 102, Building F1
XEDA Emerging Industrial Park
Xiqing Economic-technological Development Area
Tianjin, P.R.China
Telephone: +86 22 5965 3760
Fax: +86 22 5965 3761
www.ancamotion.cn/Contact-Us
Email: sales.cn@ancamotion.com



END

AMPMK Certificate Patch 2022